

## USER MANUAL: Stronic UltraLife PIR Sensor Camera




**UltraLife series** is especially practical for long term surveillance devices. This module is equipped with low PIR sensor that allows you to monitor places with low activity movements for a long period of time.

The module is placed manually to the covert PIR module, which makes it virtually unrecognizable from the real PIR sensor.

# PACKAGE CONTAINS:

---

1x Stronic UltraLife  
1x Remote control  
1x AV out Cable  
1x Charging cable  
1x USB Charger

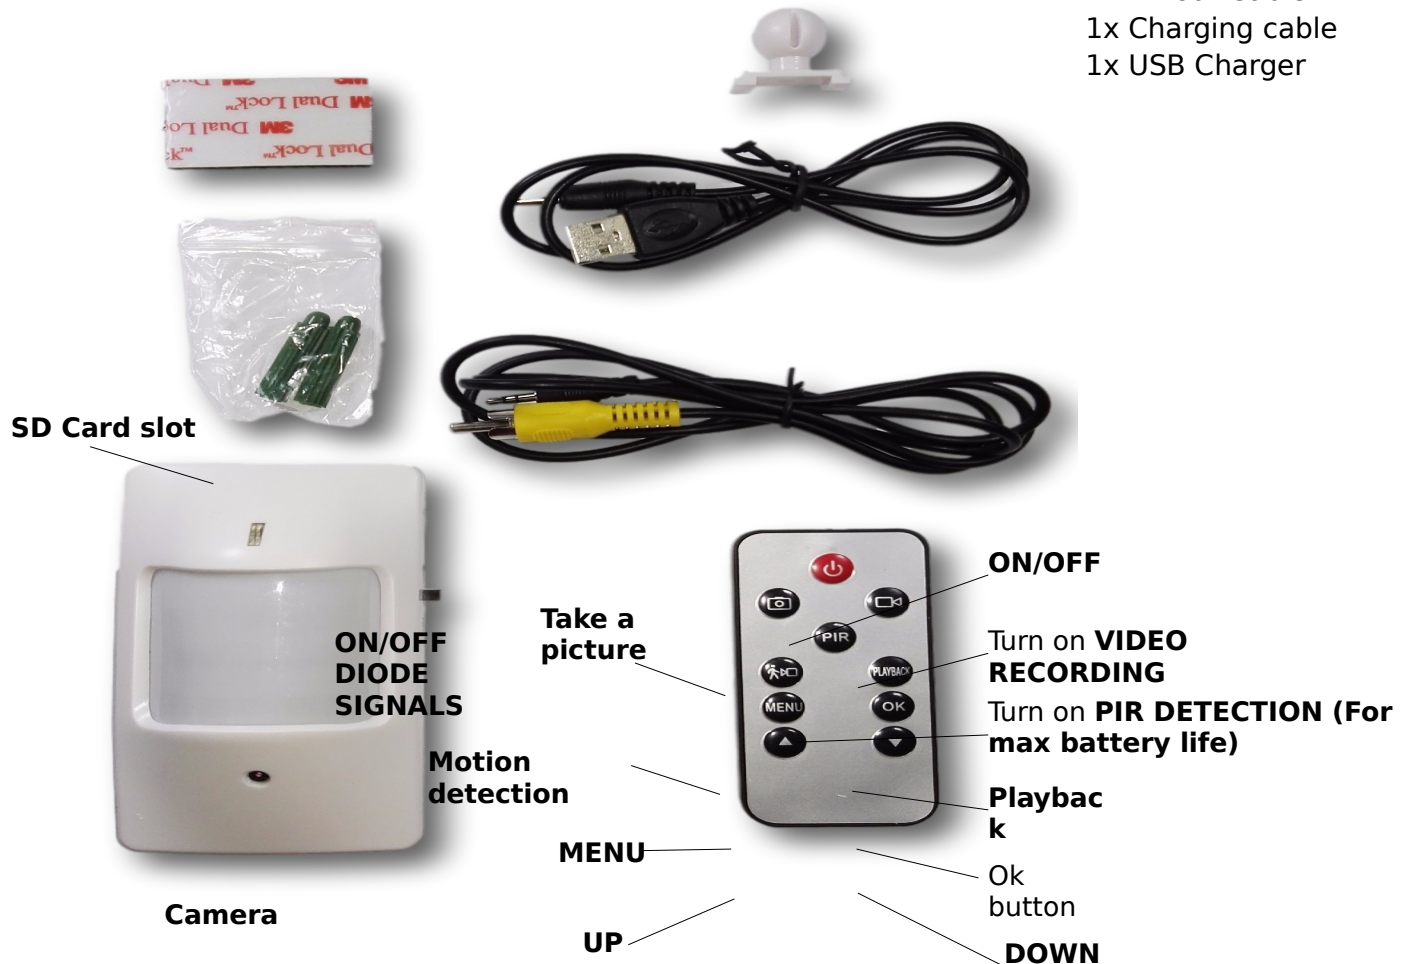

# QUICK SET-UP GUIDE:

---

## IMPORTANT:

You have to set the time manually on your SD card with Notepad If you don't have a **external AV display**

It comes **standardly in PIR mode** detection preset and HD resolution

To access **OSD menu** you have to connect **AV cable** (resolution, time, length of recordings )

You also **need external display** to access the **OSD menu**

By pressing PIR button you will enter STAND BY mode (you can make pictures etc. with remote)

### STEP 1

SETTING UP

Place in SD Card —> Turn On —> MODULE IS IN PIR MODE

You can deactivate the PIR Mode by pressing PIR button —> YOU WILL ENTER **STANDBY**

### STEP 2

CONNECTING TO OSD MENU

Connect with AV cable

Press MENU and navigate through the menu with Remote

### STEP 3

MOUNTING

Place the camera in your designated spot, **charging battery can take up to 10 hours.**

# DIODE SIGNALS

---


## TIME SETTING

---

Create a .txt file called "time.txt"

Place in current date and time in following format: RRRR.MM.DD  
HH:MM:SS

Put on the SD Card in the core directory.

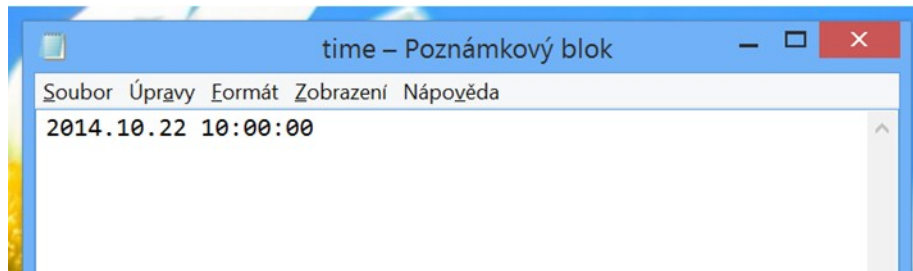

# USEFUL INFORMATION

---

If battery is fully discharged, charging will start 3 min after connecting the device into power supply.

**We recommend to format battery before you start using the device.** Charge the device at least 6hours and then let it discharged. Repeat three times. After device will be fully formatted, charge it for 5 hours, ideally.

Record a sample video, to test the device under various light conditions.

# DISCLAIMER

---

**This user manual can be slightly different from specific product.**

**Before start using the device, check with your local legal conditions. Neither supplier nor distributor assume responsibility for using device in conflict with local law.**